

## How to Determine Window Curvature

*(Tempered glass is NOT available as an option with curved windows!)*


- ① Open driver or passenger door
- ② Place a piece of cardboard or sturdy paper against the door jam and trace the contour.



- ③ With the cardboard still in place against the door jam mark where the window begins (Point "A") and where the window ends (Point "B").



- ④ Run a straight edge from point A to point B and measure the distance.
- ⑤ Determine the center of point A to point B.

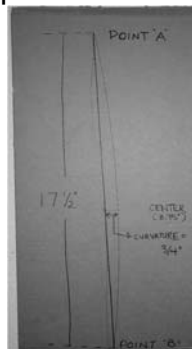

- ⑥ At the center point, measure the distance between the traced contour and the line from point A to B. This measurement is your curvature.
- ⑦ In order to properly process orders, All-Rite must have a completed glass order form that includes glass size and curvature. No orders will be processed without this information.

**NOTE:** It is the customer's responsibility to properly measure for the size of glass needed